


Integra 30S Beginning With PB225225

- Starting Engine Operation
- Starting Standby Operation
- Temperature Setpoint
- Manual Defrost
- Alarm Display
- Alarm List
- Alarm Reset
- Stopping Unit





STARTING - ENGINE OPERATION

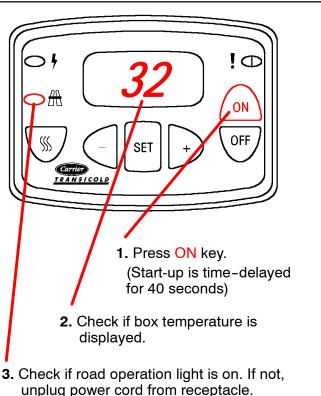

unplug power cord from receptacle.


NOTE: If standby power cord is plugged in, the unit will run in standby mode.

WARNING

Make sure the power plugs are clean and dry before connecting to any power receptacle.




STARTING - STANDBY OPERATION

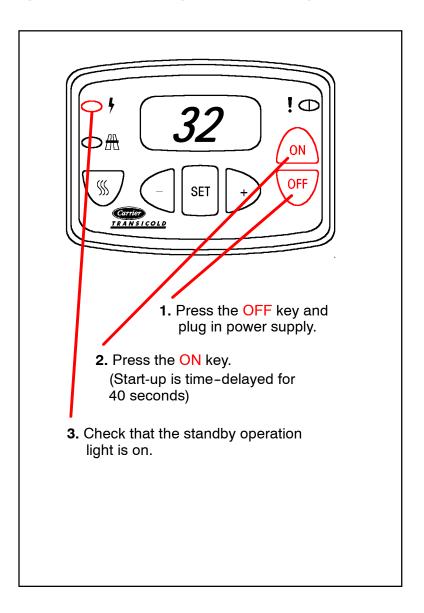




TEMPERATURE SETPOINT

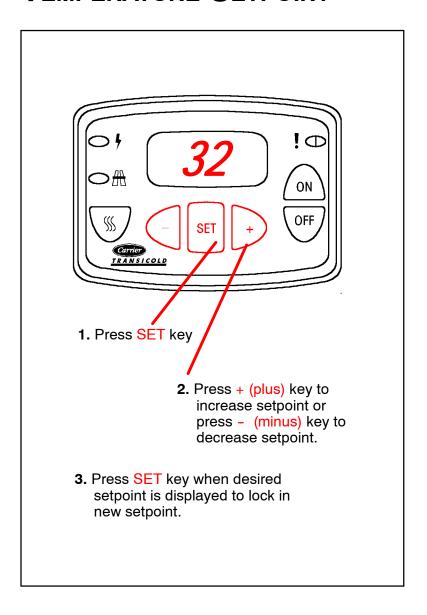




MANUAL DEFROST

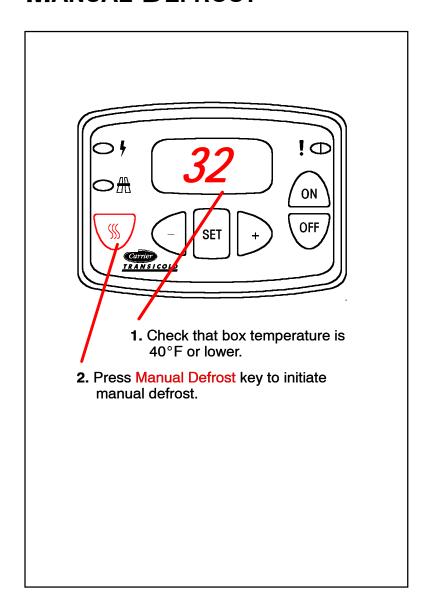



ALARM DISPLAY

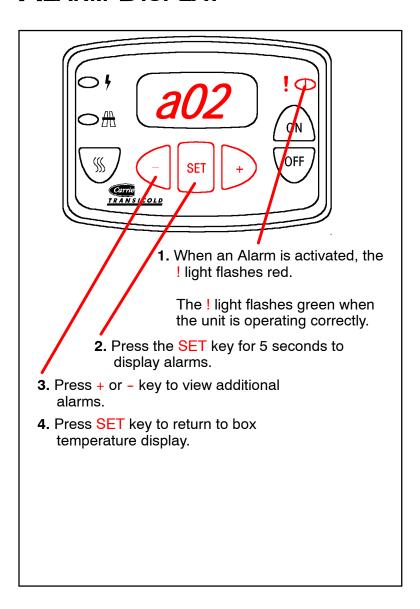




ALARM LIST

Alarm Number	DESCRIPTION			
A00	No Malfunction			
A01	High or Low Pressure Switch Open			
A02	High or Low Pressure Switch Open			
A03	Standby Compressor Overheated (Standby Only)			
A04	Road Compressor Clutch Malfunction			
A05	Standby Contactor (high amp draw) (Standby Only)			
A06	Condenser Fan Motor (hight amp draw			
A07	Evaporator Fan Motor (high amp draw)			
A08	Hot Water Relay or Electric Heat Contactor (high amp draw) (Standby Only)			
A09	Hot Gas Valve HGS1 (high amps draw)			
A10	Quench Valve (high amp draw)			
A11	Condenser Closing Valve HGS2			
A12	Out-of-Range High Temperature (Standby Only)			
A13	Out-of-Range Low Temperature (Standby Only)			
A14	Defrost Cycle >45 minutes (Standby Only)			
A15	Setpoint out of range -20°F to 86°F			
A28	Heating Relay (EHR) Open Circuit			
EE	Return Air Sensor			
bAt	Low Battery Voltage			
	Using Road & Standby Compressors at the Same Time.			
Err	Programming mistake of maximum setpoint by user.			
	Setpoint lower than maximum setpoint but in the range -20°F to 86°F			




ALARM RESET

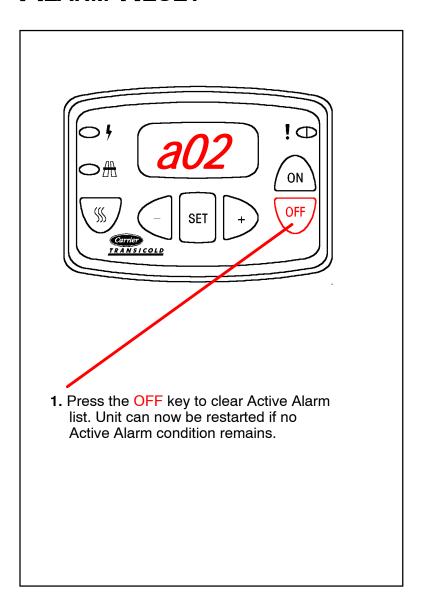



STOPPING UNIT

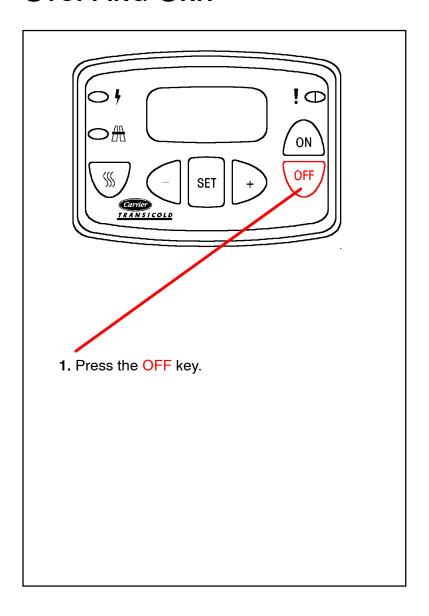

TIPS

Carrier Transicold wants you to get optimum performance from you truck refrigeration unit. The way to get that performance is to review the checklist below before each trip. Do this and you'll be well on your way to ensuring maximum refrigeration efficiency with a minimum of trouble.

- Examine interior and exterior for door, door seal and wall damage.
- Floor and floor drains should be clear of debris.
- Remote evaporator drains should be clear of debris.
- Use pallets and follow proper loading instructions for maximum air circulation.
- Precool truck and cargo before loading.

For additional information, including function and unit data display codes, refer to operating instructions inside unit front doors.

In an emergency, call Carrier Transicold Action Line 1-800-448-1661.



Carrier Transicold
A member of the United Technologies Corporation family.
Stock symbol UTX.

Carrier Transicold Division, Carrier Corporation, P.O. Box 4805, Syracuse, N.Y. 13221 U. S. A.

62-10847 RevA • Printed in U. S. A. 0408